
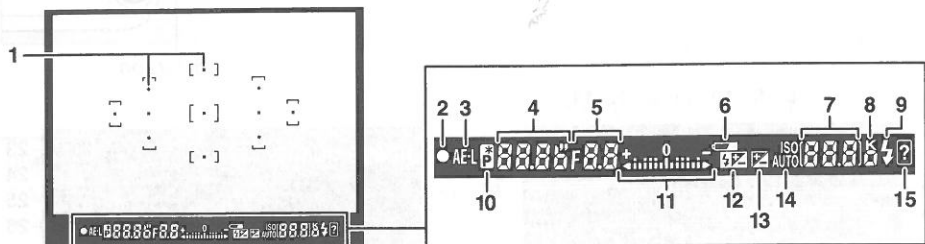


# The Viewfinder

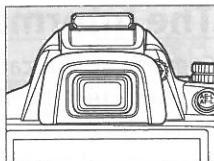


- |                                    |   |                                    |
|------------------------------------|---|------------------------------------|
| 1 Focus points                     | 7 Number of exposures remaining ..... 18                            | 9 Flash-ready indicator ..... 21   |
| 2 Focus indicator ..... 20         | 8 "K" (appears when memory remains for over 1000 exposures)..... 18 | 10 Flexible program indicator      |
| 3 Autoexposure (AE) lock indicator | Number of shots remaining before memory buffer fills..... 41        | 11 Exposure indicator              |
| 4 Shutter speed ..... 52           | White balance recording indicator                                   | Exposure compensation display      |
| 5 Aperture (f-number) ..... 52     | Exposure compensation value   | Electronic rangefinder indicator   |
| 6 Battery indicator ..... 17       | Flash compensation value  | 12 Flash compensation indicator    |
|                                    | ISO sensitivity ..... 51  | 13 Exposure compensation indicator |
|                                    |   | 14 Auto ISO sensitivity indicator  |
|                                    |   | 15 Warning indicator               |

### ✓ The Viewfinder

The response time and brightness of the viewfinder display may vary with temperature.

# Camera Menu

Most shooting, playback, and setup options can be accessed from the camera menus. To view the menus, press the **MENU** button.

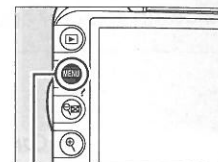


MENU button

### Tabs

Choose from the following menus:

- [Play] : Playback
- [Camera] : Shooting
- [Y] : Setup
- [Retouch] : Retouch
- [Recent] : Recent settings

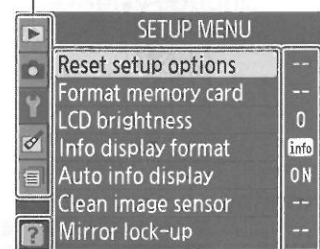

Slider shows position in current menu.


Current settings are shown by icons.

### Menu options

Options in current menu.



If a ? icon is displayed at the bottom left corner of the monitor, help can be displayed by pressing the ? (Help) button. A description of the currently selected option or menu will be displayed while the button is pressed. Press ▲ or ▼ to scroll through the display.

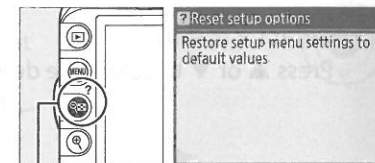

? (Help) button

### ✓ Guide Mode

To display the on-screen guide, rotate the mode dial to **GUIDE** (□ 27).